

HoMEDics

TWO YEAR LIMITED WARRANTY

(Valid in USA only)

HoMedics, Inc., guarantees this product free from defects in material and workmanship for a period of two years from the date of purchase, except as noted below.

This HoMedics product warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of HoMedics. This warranty is effective only if the product is purchased and operated in the USA. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under warranty. HoMedics shall not be responsible for any type of incidental, consequential or special damages. All implied warranties, including but not limited to those implied warranties of fitness and merchantability, are limited in the total duration of two years from the original purchase date.

To obtain warranty service on your HoMedics product, either hand deliver or mail the unit and your dated sales receipt (as proof of purchase), postpaid, along with check or money order in the amount of \$5.00 payable to HoMedics, Inc. to cover handling.

Upon receipt, HoMedics will repair or replace, as appropriate, your product and return it to you, postpaid. Warranty is solely through HoMedics Service Center. Service of this product by anyone other than HoMedics Service Center voids warranty.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual state regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit:
www.homedics.com

© 1999-2001 HoMedics, Inc. and its affiliated companies, all rights reserved.
HoMedics® is a registered trademark of HoMedics, Inc. and its affiliated companies.
ProClipper™ and The beauty of living well.™ are trademarks of HoMedics, Inc. and its affiliated companies. All rights reserved.

IB-PC400-A

HoMEDics®

The beauty of living well.™

ProClipper™

18-Piece Kit



Instruction Manual and Warranty Information

PC-400

2 year
limited warranty

2 year
limited warranty

Mail To:
Consumer Relations
HoMedics
Service Center, Dept. 168
3000 Pontiac Trail
Commerce Township MI
48390

Email:
cservice@homedics.com

Introduction

Thank you for purchasing ProClipper™, adjustable taper clipper. This clipper is built with high quality craftsmanship to ensure years of dependable use.

Pro Clipper features:

- Professional salon quality
- Durable high-carbon steel blades
- Comfortable ergonomic design
- Complete hair-cutting system

See page 6 for the pieces included with your ProClipper

IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER

- To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or showering.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

WARNING


- To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by HoMedics; specifically any attachments not provided with the unit.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to HoMedics Service Center for examination and repair.
- Keep cord away from heated surfaces.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep air openings free of lint, hair, etc.
- Never use while sleeping or fall asleep while using the ProClipper.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use on or near eyes or other highly sensitive areas.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electrical shock or injury to persons.
- Do not carry this appliance by supply cord or use cord as handle.
- To disconnect, turn all controls to the "OFF" position, then remove plug from outlet.
- This appliance is designed for household use only.

CAUTION:
All servicing of
this ProClipper
must be
performed by
authorized
HoMedics
service
personnel only.

Caution – Please read all instructions carefully before operating.

- If you have any concerns regarding your health consult your doctor before using this product.
- Individuals with pacemakers should consult a doctor before use.
- Never leave the appliance unattended, especially if children are present.
- Never cover the appliance when it is in operation.
- Do not use this product for more than 20 minutes at a time.
- Extensive use could lead to the products excessive heating and shorter life. Should this occur, discontinue use and allow the unit to cool before operating.
- Never use this product directly on swollen or inflamed areas or skin eruptions.
- Never use this product while in bed.
- This product should never be used by any individual suffering from any physical ailment that would limit the user's capacity to operate the controls.
- This unit should not be used by children without adult supervision.

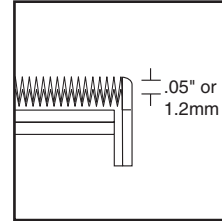

Instructions for Use

Blade Alignment

- Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
- Blades must be realigned if they have been removed for cleaning or replacement.
- To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately .05" or 1.2mm back from bottom blade. Compare your clipper blades with the sketch.)
- If blade alignment is incorrect, add a few drops of oil to the blades, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned.

Oil

- To maintain your clipper in peak condition, the blades should be oiled before every haircut.
- Do not use hair oil, grease, oil mixed with kerosene or any solvent. The solvent will evaporate and leave a thick oil which may slow down the blades motion.


Power Screw

- The power screw permits you to adjust the power. It has been adjusted before leaving the factory. However, if the voltage in your home is low, you may need to re-adjust it.
- To adjust, use a screwdriver or a thin coin to turn power screw in clockwise direction until the arm strikes the coil, making a noise. Then slowly turn power screw out (counter-clockwise) just until noise stops. This is maximum power setting.


ProClipper™

18-Piece Kit

Attachment Comb
1/8" attachment comb

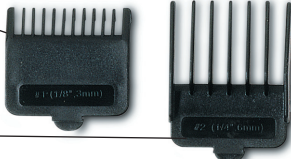

Attachment Comb
1/4" attachment comb

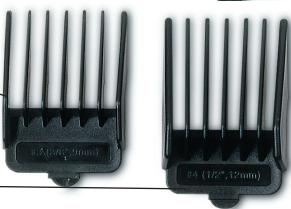 

Attachment Comb
3/8" attachment comb



Attachment Comb
1/2" attachment comb

**Left and Right Ear
Taper Attachment
Combs**



Barber Cape
Not pictured

Storage Case
Not pictured

**Bonus "How-To"
Video**
Not pictured



Clipper Oil
Necessary for keeping
blades in top condition



 
Styling Comb

Barber Comb

Styling Shears
Durable, high-quality,
professional cutting
shears



**Styling
Clips**

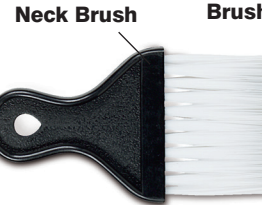

Neck Brush



Blade Guard
Helps keep blades
protected

 
**Adjustable
Taper Control**

On/Off Switch



**Cleaning
Brush**

**High-Carbon
Steel Blades**

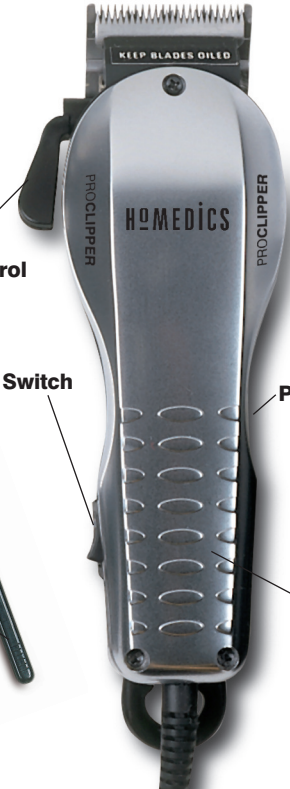

Power Screw

**Mirror
Chrome
Finish**

Blade Lever (Adjustable Taper Control)

- The lever is conveniently located near your thumb (if you're right-handed) so it can easily be adjusted while the clipper is in your hand.
- The lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without an attachment comb.
- When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. Pushing the lever downward gradually increases the cutting length.
- In its lowest position, the lever will leave the hair approximately 1/8 inch length.
- The lever will also extend the use of your blades since a different cutting edge is used in each setting.
- In addition, if extremely heavy hair cutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades.
- While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times.


Doing this each time after you have finished using your clipper will help to keep the blades clear of cut hair. If your clipper stops cutting and this does not help, your cutting blades are dulled. Replace them with new blades.




Attachment Comb (see below)

- Attachment Comb #1 leaves 1/8 inch (3mm) hair length
- Attachment Comb #2 leaves 1/4 inch (6mm) hair length
- Attachment Comb #3 leaves 3/8 inch (9mm) hair length
- Attachment Comb #4 leaves 1/2 inch (12mm) hair length
- Left Ear Taper Attachment Comb
- Right Ear Taper Attachment Comb

Each comb attachment is marked accordingly on its outside middle surface and color coded.

- To attach a comb, hold it with its teeth upward and slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper blade.
- To remove the comb, simply pull the comb upward and away from the clipper blade.
- For even cutting, allow the comb attachment cutter to cut its way through the hair. Do not force it through quickly. Also remember to comb the hair frequently to remove trimmed hair and to check for uneven strands.

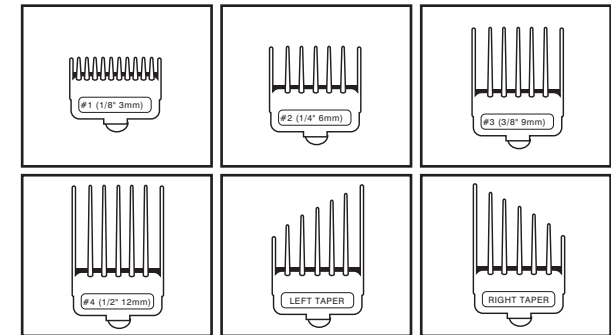

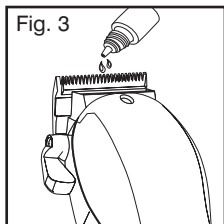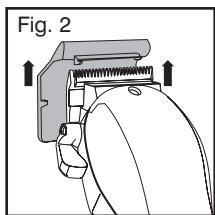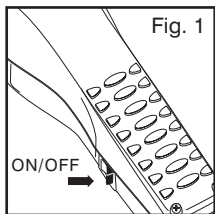

Operating instructions

1. The ProClipper is intended for household use only.
2. Set the "ON-OFF" switch to the "O" position. (See fig. 1)
3. Remove the plastic blade guard. (See fig. 2)
4. Disperse a few drops of clipper oil (included in this package) across the blades. (See fig. 3) Wipe off excess oil with a clean, dry cloth. NOTE: Oil the blades frequently during use to help the blades stay sharp longer. Do not immerse the clipper into any lubricant.
5. Plug the clipper into standard AC 110v household electrical outlet.
6. Push the "ON-OFF" switch to turn the clipper to the "I" position. (See fig. 1)
7. When finished clipping, turn the clipper off to the "O" position and unplug from the electrical outlet.
8. Clean the hair clippings from the blades using the clipper cleaning brush (included in this package). Wipe the housing with a clean, dry cloth.
9. Before replacing the blade guard for clipper storage, spread one or two drops of oil over the blades to keep it lubricated.

Important

- ALWAYS turn clipper off and unplug from outlet before cleaning.
- NEVER clean, remove, or replace blade guard with unit on.
- Do NOT apply pressure to blades.
- Do NOT touch blades with hard objects as this may damage them.
- Do NOT use ProClipper while bathing or showering, or immerse in water or other liquids, as damage to ProClipper may occur.
- NEVER use harsh or corrosive cleaners such as benzene or bleach.

Storage

Replace the blade guard. Coil the electric cord and store clipper in a dry location.

Maintenance

The motor of your clipper has been permanently lubricated at the factory. Other than the recommended cleaning, oiling of the blades, and blade replacement, all maintenance must be performed by HoMedics authorized service personnel.

Return your clipper to the closest authorized HoMedics service center for any servicing or repair (see warranty).